

60mm

Frequently Asked Question

1.How to do if the fingerprint can't be identified?

Usually due to fingerprint wear,peeling, scratches, dirty, wetfingers, or fingerprint collection window with smudginess and water droplets, fingerprint identification is not successful. It is necessary to ensure that the fingers and fingerprint window are clean and dry.

In case of finger scratches, it is recommended to enter at least 3 fingerprints registration after purchase.

2.How many fingerprints can be registered?

10 fingerprints can be registered.

3.How to do if the battery is dead?

Connect the charging port with Micro USB,the red light is on,indicating that it is charging, and it can be unlocked normally during charging. The light is off, indicating that it is fully charged.

4.How long does it continue after being fully charged?

After being fully charged, it can stand by for 6 months, and when the power is low, the red light flashes after unlocking.



扫一扫中文操作指南



FINGERPRINT LOCK

YOUR FINGER IS YOUR KEY

Lock opens using fingerprint scanner—rechargeable lithium-ion battery




QuickStartGuide

Fingerprint registration


Press the finger for 5 seconds until the blue light is on



Press continuously for more than 10 times as the image shows until the green light is on

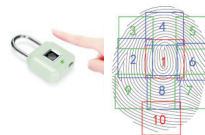

When the green light is on press another finger 10 times until the light is off

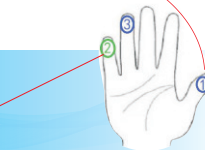

Fingerprintadding

After unlocking, press and hold the registered finger for 5 seconds until blue light is on.



Press a new finger for more than 10 times Until the light turns green



Restorefactorysettings

After unlocking, press and hold the registered finger for 20 seconds, and release when the red light is on



Press the same registered finger when the red light is on. And all the fingerprints are removed after the light changing to green.

80mm